

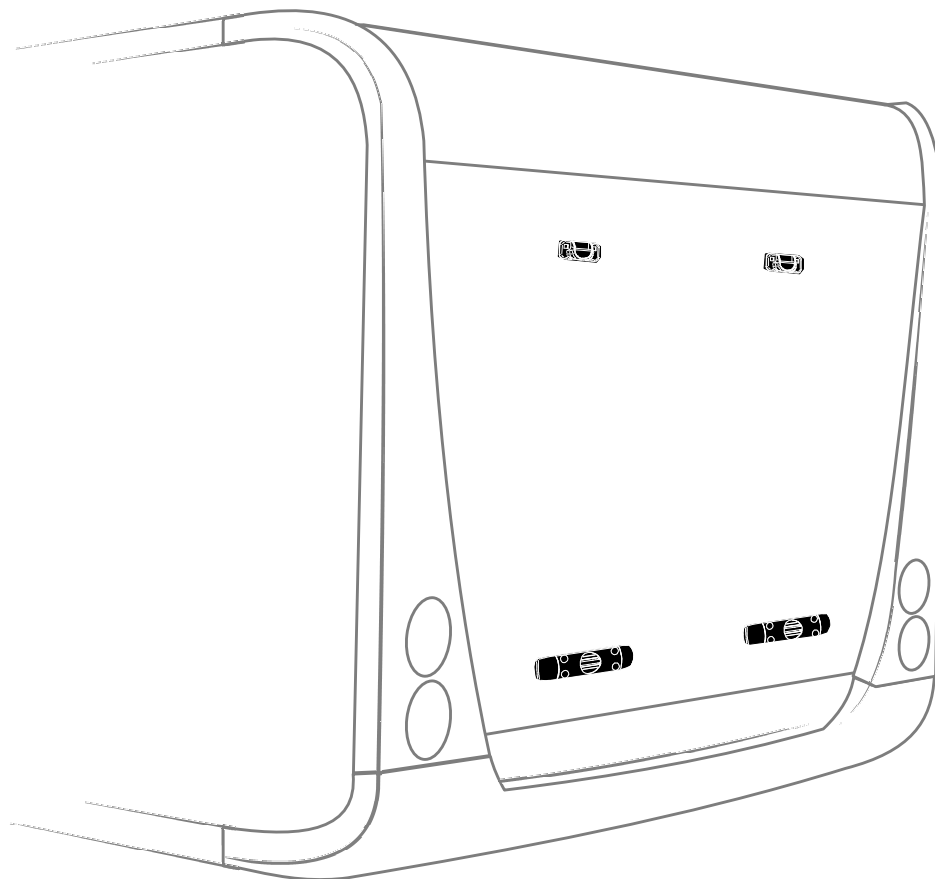
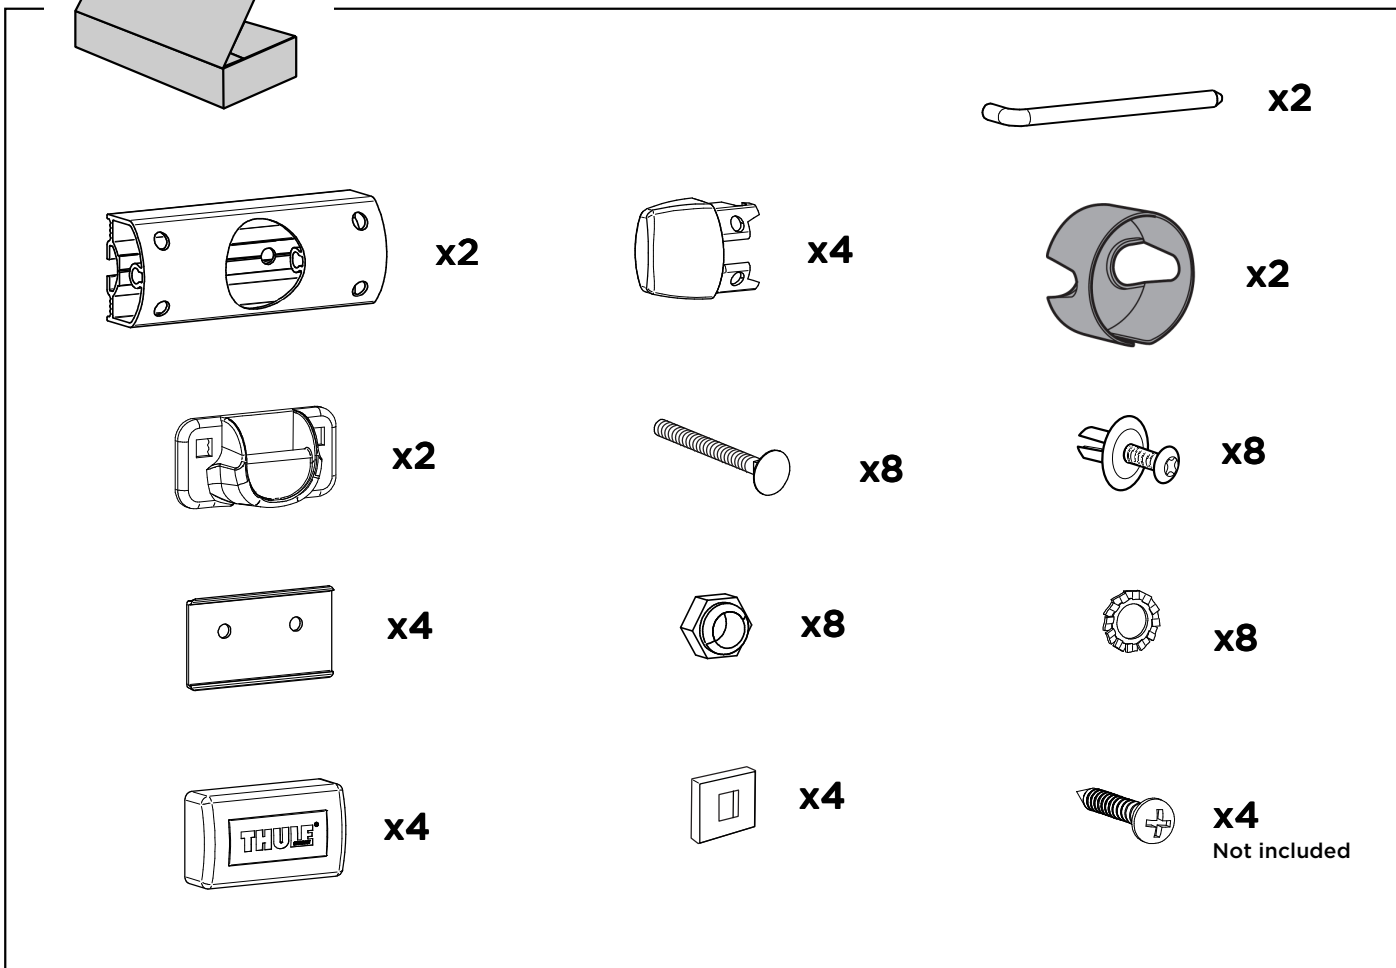
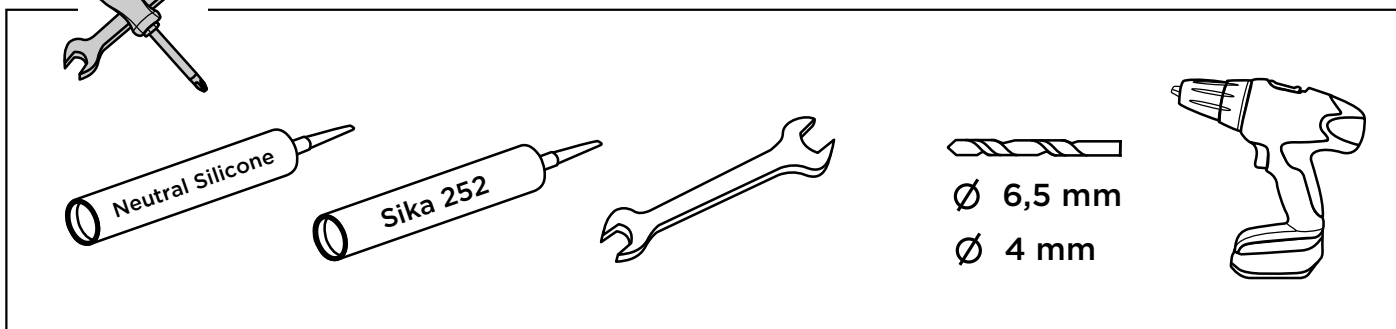


BC Adapter for Curved Walls

➤ Instructions

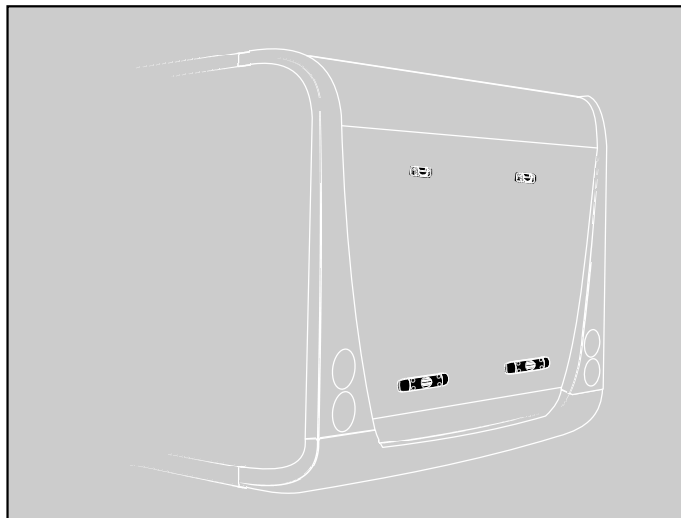


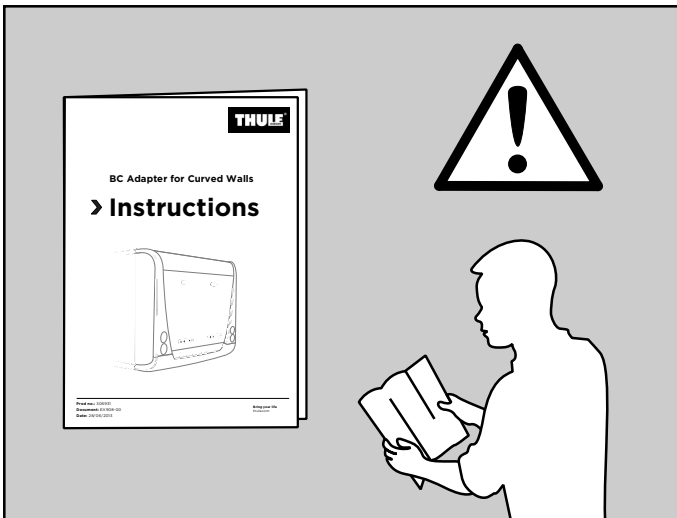


➔ For complete installation, see instructions Bike Carrier

1A


Counterplate mounting



x2




x2



x4



x4



x8



x8




x8



x4

1

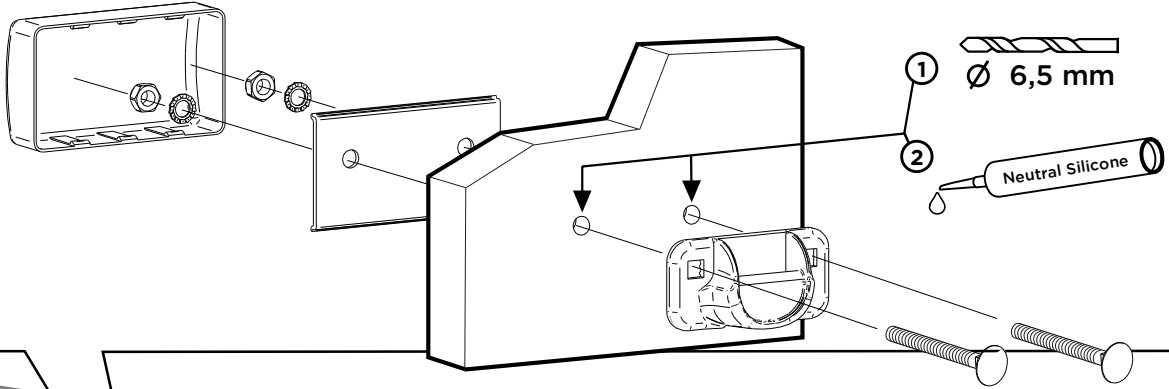


600 mm




3.*

*See technical specifications in Bike carrier manual

2

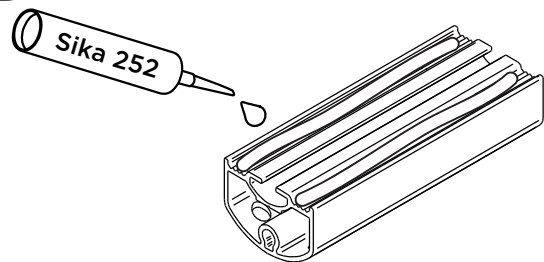


3

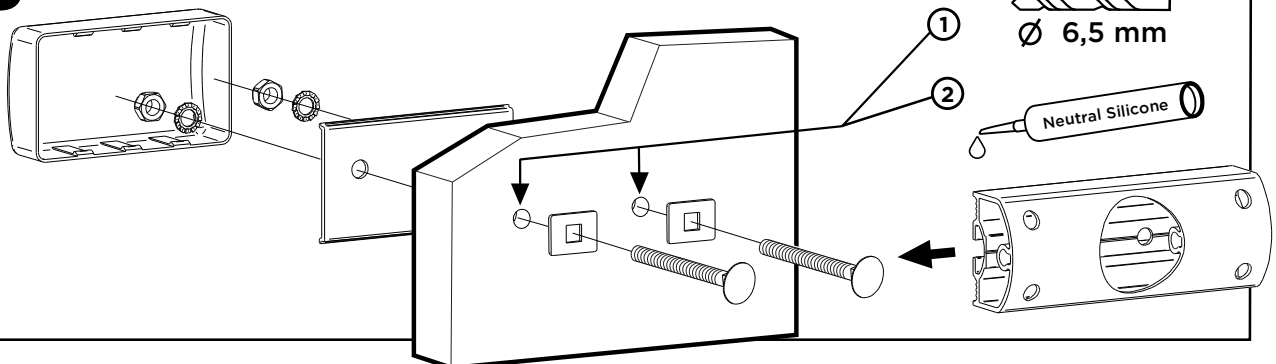


➔ For complete installation, see instructions Bike Carrier

1B


Blind mounting



x2




x2



x2



x2




x4



x4




x4



x4

Not included

1

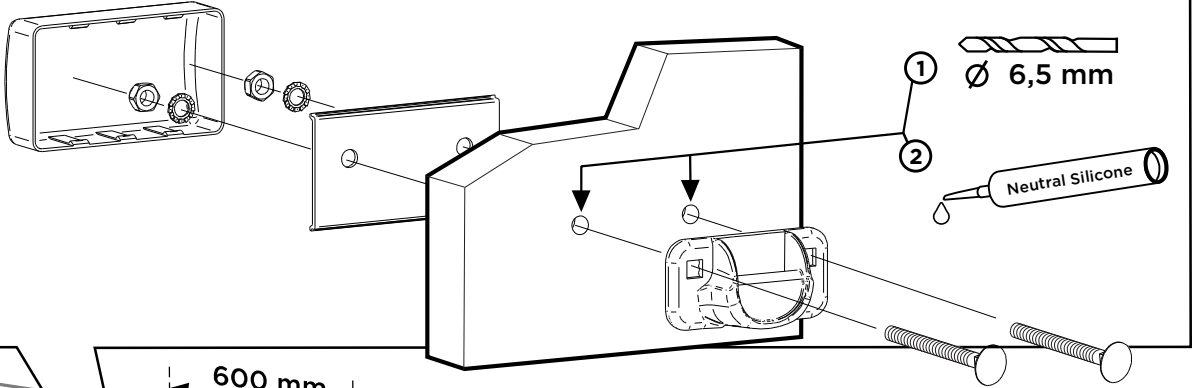


1 Ø 6,5 mm

2 Neutral Silicone

600 mm

271 mm **

1330 mm **




3.*

*See technical specifications in Bike carrier manual


** Recommended positions for : LMC COMFORT LINE (MODEL 2014)

2

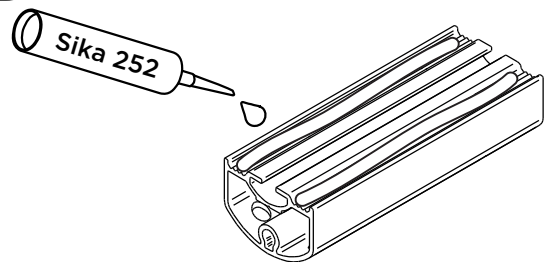

Sika 252

3

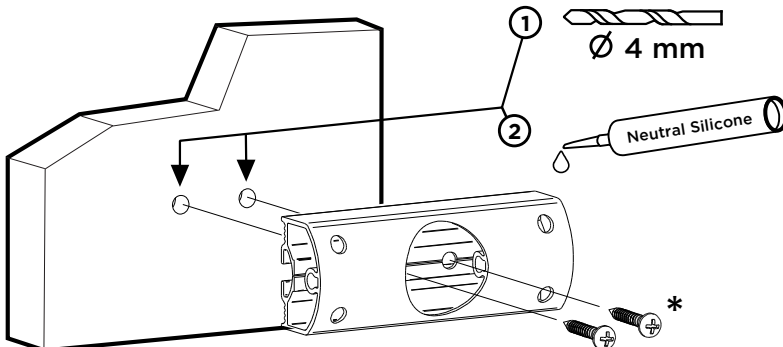


1 Ø 4 mm

2 Neutral Silicone


*Recommended:
DIN 7504 -4,8 mm x 32 mm

➔ For complete installation, see instructions Bike Carrier


5



x2



x4



x8



x2



x2

